

**Made in America**

**Lifetime Guarantee**



**Thank you for purchasing this instrument from Intellitronix. We value our customers!**


**INSTALLATION GUIDE**  
**Corvette Tachometer recall**  
**Part Number: TB2102**  
**Year Series: '80 - '82**

**\* Always disconnect the battery *before* attempting any electrical work on your vehicle.\***

**KIT COMPONENTS:**

- ◇ **One (1) Printed Circuit Board**
- ◇ **Three (3) Nylon washers**

**CIRCUIT BOARD INSTALLATION INSTRUCTIONS**

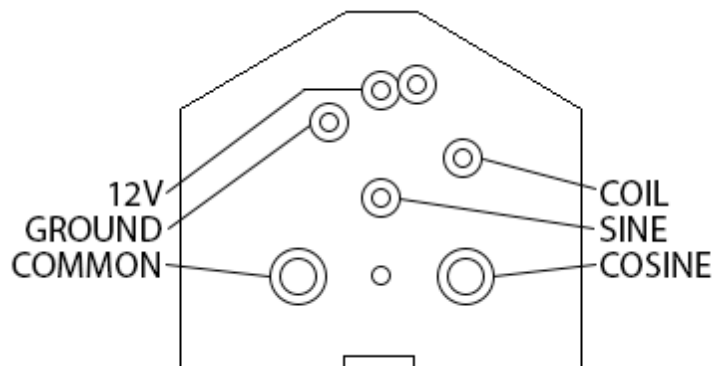

1. Remove the tachometer from the housing
2. Flip the tachometer over and remove the three nuts securing the circuit board to the gauge.
3. Remove the three remaining screws from the original circuit board.
4. Insert the three screws from step (3.) into the Intellitronix circuit board at the locations marked +12V, GND, and Coil.
5. Put the three nylon washers on the screws protruding from the gauge.
6. Slide the circuit board onto the three screws pointing towards the gauge.
7. Replace the nuts back onto the three screws.
8. Put the tachometer back into your housing.

# # #

Made in America

Lifetime Guarantee



Technical Support

Monday – Friday

9am to 5 pm EST

(440) 210-7646

[support@intellitronix.com](mailto:support@intellitronix.com)



**This product carries a limited Lifetime Warranty.**

**This warranty is limited to replacement or repair of the unit at the discretion of Intellitronix.**